

## Session 3; < Plasma Accelerators / Magnetoplasmadynamic (MPD) Thrusters

Ion Engines and, as we will see, Electrospray Thrusters are electrostatic devices, because the electrostatic forces that accelerate the ions (or droplets) are also directly felt by some electrode, and this is how the structure receives thrust. The thrust density scales as  $\frac{1}{2}\epsilon_0 E^2$ , where  $E$  is the field on the surface of the extractor electrode. This is the electrostatic pressure. Since  $\epsilon_0 = 8.854 \times 10^{-12}$  F/m and  $E$  is rarely more than 2000 V/m, we are limited to electrostatic pressures of about 20 N/m<sup>2</sup> (and due to various inefficiencies more like 1-2 N/m<sup>2</sup>).

Hall thrusters occupy an intermediate position, and point the way to a higher thrust density. Ions accelerate electrostatically, but electrons, which see the same (and opposite) electrostatic force, because the plasma is quasineutral, are essentially stopped (axially) by an interposed magnetic field. Of course, the force is mutual, and so the electrons exert this force on the magnetic assembly (by means of the azimuthal Hall current they carry). In the end, then, the structure is pushed magnetically. To be more precise, we should say that most of the force is magnetically transmitted. There is still an electrostatic field in the plasma, and so there will be some electrostatic pressure acting on various surfaces. But because we made the plasma quasineutral, these fields are much weaker than they are between the grids of an ion engine, and it is a good thing we have the magnetic mechanism available. In fact, the thrust density of Hall thrusters is about 10 times higher than that of ion engines, despite the weak electrostatic fields.

More generally, we can ask how much stronger can the force per unit area on some structure be when it is transmitted magnetically as compared to electrostatically. As we will see in detail, the counterpart to the “electrostatic pressure” is the “magnetic pressure”,  $B^2/2\mu_0$ , where  $B$  is the field strength and  $\mu_0 = 4\pi \times 10^{-7}$  Hy/m is the permeability of vacuum. Without recourse to superconductive structures,  $B$  can easily be of the order of 0.1 Tesla (either using coils or permanent magnets), so  $B^2/2\mu_0 \approx 8,000$  N/m<sup>2</sup>, or 400 times the maximum practical electrostatic pressure.

Thrusters that exploit these magnetic forces are called *Electromagnetic* (although they should be called Magnetic by rights). The magnetic field can be external, i.e., supplied by coils and not greatly modified by plasma currents, or it may be self-induced, when plasma currents become large enough. They can also be steady (or at least slowly varying compared to plasma flow time), or they can be varying very fast, so as to set up strong induced electromotive forces (transformer effect). A few examples are:

- **Magneto Plasma Dynamic (MPD) thrusters:** The most powerful type, with self-induced magnetic fields, operates in steady (or quasi-steady) fashion, and can generate multi-Newton thrust levels with a few cm diameter (compared to about 0.1 N for a 30 cm ion engine, or for a 10 cm Hall thruster).
- **Applied field MPD thrusters:** Here currents are less strong, so the main part of the  $B$  field is external. Still steady or quasi-steady.
- **Pulsed Plasma Thrusters (PPT):** Pulsed Plasma Thrusters (PPT) are very similar in principle to self-field MPD, but they use a solid propellant (Teflon) which is ablated during each pulse of operation. These pulses last 10-20  $\mu$ s only, but are just long

enough that induced emf fields (from  $\nabla \times \vec{E} = -\frac{\partial \vec{B}}{\partial t}$ ) are still weak. Because of various practical (mostly thermal) issues, PPT thrusters are not very efficient (<10%), but they are simple and robust.

- **Pulsed Inductive Thrusters (PIT):** Here the emphasis is on very fast magnetic rise time (1-10  $\mu$ s) and the induced emf is used to break down the gas, ionize it, and drive a closed current loop that exerts the desired magnetic force. They can be thought of as a one-turn transformer in which the secondary is a plasma ring; the repulsion between primary and secondary accelerates the plasma away and pushes the primary coil forward. To avoid dissipating most of the power in Ohmic losses, the device must be fairly large (>0.5 m) and powerful (MW to GW of instantaneous power).

In this lecture we will have time only to explore the self-field MPD type. We begin with some basic Physics.

### Electromagnetic Forces on Plasmas - MPD Thrusters

For a charge  $q$ , moving at velocity  $\vec{v}$  in an electric field  $\vec{E}$  and magnetic field  $\vec{B}$ , the Lorentz force is,

$$\vec{F} = q \left( \vec{E} + \vec{v} \times \vec{B} \right) \quad (1)$$

Now,  $\vec{F}$  cannot depend on the rectilinear motion of the observer. For non-relativistic velocities,  $\vec{B}$  is also independent of motion, and so is the scalar  $q$ . Therefore, the field  $\vec{E}$  must be different as viewed from different frames of reference. Let  $\vec{E}$  be the field in the laboratory frame, and  $\vec{E}'$  that in another frame moving at  $\vec{u}$  relative to the first. Then we must have,

$$\vec{E} + \vec{v} \times \vec{B} = \vec{E}' + (\vec{v} - \vec{u}) \times \vec{B}$$

so that,

$$\vec{E}' = \vec{E} + \vec{u} \times \vec{B} \quad (2)$$

(in particular, for  $\vec{u} = \vec{v}$  the Lorentz force is seen to be purely electrostatic; i.e.,  $\vec{F} = q\vec{E}'$ ). Most often the frame at  $\vec{u}$  is chosen to be that moving at the mean mass velocity of the plasma.

Consider a plasma where there is a number density  $n_j$  of the  $j^{\text{th}}$  type of charged particle, which has a charge  $q_j$  and moves at mean velocity  $\vec{v}_j$ . The net Lorentz force per unit volume is,

$$\vec{f} = \sum_j n_j q_j \left( \vec{E} + \vec{v}_j \times \vec{B} \right) \quad (3)$$

and since the plasma is neutral  $\sum_j n_j q_j = 0$ , then,

$$\vec{f} = \left( \sum_j n_j q_j \vec{v}_j \right) \times \vec{B} \quad (4)$$

But, by definition,

$$\vec{j} = \sum_j n_j q_j \vec{v}_j \quad (5)$$

where  $\vec{j}$  is the current density vector (A/m<sup>2</sup>). So, finally,

$$\vec{f} = \vec{j} \times \vec{B} \quad (6)$$

Notice that  $\vec{v}_j$  in Eq. (5) could be in any frame, including the plasma frame.

### Ohm's Law

In most cases, the dominant contribution to  $\vec{j}$  (Eq. (5)) is from electrons, given their high mobility. In the plasma frame,

$$\vec{j} \approx \vec{j}_e = -en_e \vec{v}_e \quad (7)$$

Notice that  $\vec{v}_e$  is the electron mean velocity vector, not to be confused with the mean thermal speed  $\bar{c}_e$ . The picture of electron motions is that of a very rapid, chaotic swarming of electrons back and forth (“going nowhere”), except that the whole swarm “slowly” drifts at  $\vec{v}_e$ . Typically,  $|\vec{v}_e| \ll \bar{c}_e$ . Let us make a crude model of the motion of the electron swarm. The net force on it per unit volume is,

$$\vec{f}_e \approx -en_e \left( \vec{E}' + \vec{v}_e \times \vec{B} \right) \quad (8)$$

where  $\vec{E}'$  is used, since we are in the plasma frame.

In steady state, this is balanced by the drag force opposing motion of electrons relative to the rest of the fluid, which we are assuming to be at rest, and whose particles have, by comparison, only a very slow thermal motion. To evaluate this drag, let  $\nu_e$  be the effective collision frequency per electron for momentum transfer. This frequency is defined such that in each collision with a particle of “the rest of the fluid,” the electron is, on average, scattered by 90°, so that its forward momentum is completely lost. The mean drag force per unit volume is,

$$\vec{f}_e^d = -n_e m_e \nu_e \vec{v}_e = \frac{m_e \nu_e}{e} \vec{j} \quad (9)$$

Equating the sum of Eqs. (8) and (9) to zero,

$$\vec{j} = \frac{e^2 n_e}{m_e \nu_e} \left( \vec{E}' + \vec{v}_e \times \vec{B} \right) = \frac{e^2 n_e}{m_e \nu_e} \vec{E}' - \frac{e}{m_e \nu_e} \vec{j} \times \vec{B}$$

Define the scalar conductivity,

$$\sigma = \frac{e^2 n_e}{m_e \nu_e} \quad (10)$$

and the Hall parameter,

$$\beta = \frac{eB}{m_e \nu_e} \quad \text{and} \quad \vec{\beta} = \beta \left( \frac{\vec{B}}{B} \right) \quad (11)$$

We can write the generalized Ohm's law as,

$$\sigma \vec{E}' = \vec{j} + \vec{j} \times \vec{B} \quad (12)$$

where, as given in Eq. (2),  $\vec{E}' = \vec{E} + \vec{u} \times \vec{B}$ . As usual, the Hall parameter can be expected to be high at low pressures and densities, where collisions are rare, and also at high magnetic field, where the gyro frequency is high. In many plasmas of interest in MHD or MPD,  $\beta \sim 1$ .

### Electromagnetic Work

The rate at which the external fields do work on the charged particles can be calculated (per unit volume) as,

$$\dot{W} = \sum_j n_j q_j \left( \vec{E} + \vec{v}_j \times \vec{B} \right) \cdot \vec{v}_j = \sum_j n_j q_j \vec{E} \cdot \vec{v}_j = \vec{E} \cdot \vec{j} \quad (13)$$

The magnetic field does not directly contribute to the total work, since the magnetic force is orthogonal to the particle velocity; it does, however, modify  $\vec{E}$  or  $\vec{j}$  (depending on boundary conditions), and through them it does affect  $\dot{W}$ . This total work rate goes partly into heating the plasma (dissipation) and partly into pushing it (mechanical work). To see this, notice that,

$$\dot{W} = \vec{E} \cdot \vec{j} = \left( \vec{E}' - \vec{u} \times \vec{B} \right) \cdot \vec{j} = \vec{E}' \cdot \vec{j} - \left( \vec{u} \times \vec{B} \right) \cdot \vec{j} = \vec{E}' \cdot \vec{j} + \left( \vec{j} \times \vec{B} \right) \cdot \vec{u}$$

Also, using Ohm's law,

$$\vec{E}' \cdot \vec{j} = \frac{1}{\sigma} \left( \vec{j} + \vec{j} \times \vec{\beta} \right) \cdot \vec{j} = \frac{j^2}{\sigma}$$

Thus,

$$\dot{W} = \frac{j^2}{\sigma} + \left( \vec{j} \times \vec{B} \right) \cdot \vec{u} \quad (14)$$

The second term of this expression is simply the rate at which the Lorentz force  $\vec{j} \times \vec{B}$  does mechanical work on the plasma moving at  $\vec{u}$ . The first term is always positive and is the familiar Joule heating (also called Ohmic heating) effect. Notice how the presence of the magnetic field introduces the possibility of accelerating a plasma, in addition to the unavoidable heating. In an efficient accelerator, we would try to maximize  $\left( \vec{j} \times \vec{B} \right) \cdot \vec{u}$  at

the expense of  $j^2/\sigma$ .


### Origin of the magnetic field

The magnetic field can either be provided by external coils, or induced directly by the currents circulating in the plasma. The general relationship between  $\vec{B}$  and  $\vec{j}$  (in steady state and without magnetic materials) is Ampere's law  $\nabla \times \vec{B} = \mu_0 \vec{j}$ . In integral form,

$$\oint \frac{\vec{B}}{\mu_0} \cdot d\vec{\ell} = \int_A \vec{j} \cdot d\vec{A} \quad (15)$$

which states that the circulation of  $\vec{B}/\mu_0$  around a closed line equals the total current linked by this loop. When the current is constrained to circulate in metallic wires, the integral form can be used to provide simple formulae for the field due to various conductor arrangements. For example, inside a long solenoid carrying a current  $I$ , the field  $\vec{B}$  is nearly constant, and we obtain (see sketch),

$$B = \frac{\mu_0 n I}{\ell}$$

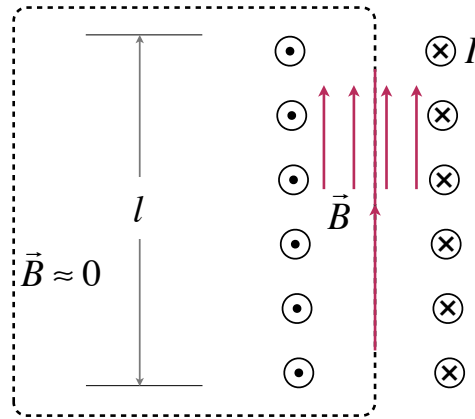

where  $n$  is the number of turns. The magnetic field also has the essential property of being solenoidal, i.e.,

$$\nabla \cdot \vec{B} = 0 \quad (16)$$

(notice that, due to Ampere's law,  $\vec{j}$  also obeys  $\nabla \cdot \vec{j} = 0$ , which can be seen as a statement of charge conservation). In regions where no current is flowing we have  $\nabla \times \vec{B} = 0$  as well, so that a magnetic potential can be defined by  $\vec{B} = -\nabla\psi$ . Then, since  $\nabla \cdot \vec{B} = 0$ , this potential obeys Laplace's equation,

$$\nabla^2 \psi = 0 \quad (17)$$

but notice that no such potential exists in a current-carrying plasma. The vector  $\vec{B}$  must be found by simultaneous solution of Ampere's and Ohm's laws (with the additional constraint  $\nabla \cdot \vec{B} = 0$ ).

Consider now a conductive plasma inside a solenoid, so that both an external field  $\vec{B}_{ext}$  and an induced field  $\vec{B}_{ind}$  exist. The first is due to the coil currents, the second to those in the plasma itself. Suppose the plasma currents are due to the flow at  $\vec{u}$  of the plasma in the total magnetic field  $\vec{B}$ , while any external electrodes are short-circuited, so that  $\vec{E} = 0$  in the laboratory frame. Then,

$$\vec{E}' = \vec{E} + \vec{u} \times \vec{B} = \vec{u} \times \vec{B}$$

In order of magnitude,  $E' \sim uB$ . Neglecting the Hall effect, then,  $j \sim \sigma uB$ . The induced field obeys separately its own Ampere's law  $\nabla \times \vec{B}_{ind} = \mu_0 \vec{j}$ , where  $\vec{j}$  is the plasma current density; this is because  $\nabla \times \vec{B}_{ext} = 0$  in the plasma (outside the coil wires). Thus, in order of magnitude,  $B_{ind} = \mu_0 \ell j$ , where  $\ell$  is the characteristic distance for variation of  $B_{ind}$ , i.e., the plasma *size*. Altogether,

$$B_{ind} = \mu_0 \ell \sigma u B \quad (18)$$

and since  $\vec{B} = \vec{B}_{ext} + \vec{B}_{ind}$ , we have,

$$\frac{B_{ind}}{B_{ext} + B_{ind}} = \mu_0 \ell \sigma u \equiv \text{Re}_m$$

This indicates that the field created by the plasma currents becomes comparable to the external field when the magnetic Reynolds number  $\text{Re}_m$  becomes of order unity. For a high power Argon MPD accelerator,



$$\sigma = 1,000 \text{ Si/m} \quad u \approx 10,000 \text{ m/s} \quad \ell \approx 0.1 \text{ m}$$

we calculate  $\text{Re}_m = 10^{-6} \times 0.1 \times 10^3 \times 10^4 = 1$ , and so, operation with self-induced magnetic field becomes possible. This simplifies considerably the design, since no heavy and power-consuming external coils are needed. The order of magnitude also indicates, however, that external field augmentation may be desirable under some conditions; the issue of self-field vs. applied field devices is not yet fully resolved.

## A Simple Plasma Accelerator


Consider a rectangular channel with two conducting and two insulating walls, as shown in the figure below. A plasma is flowing in the channel at velocity  $\vec{u}$ , and an external electric field is applied. Ignoring for now the Hall effect, if this  $\vec{E}$  field is larger in magnitude than  $uB$  (the induced Faraday field), a current  $\vec{j}$  will flow, given by  $\vec{j} = \sigma \vec{E}'$  or  $\vec{j} = \sigma (\vec{E} + \vec{u} \times \vec{B})$  in the direction of  $\vec{E}$ . The Lorentz force  $\vec{f} = \vec{j} \times \vec{B}$  is then in the forward direction, as indicated, and we have an accelerator.

On the other hand, if  $E < uB$ , then the current  $\vec{j}$  flows in the direction opposite to  $\vec{E}$ . Externally, positive current flows into the (+) pole of our “battery” and could be used to recharge it; we have now an MHD generator, and the battery would probably be replaced by a passive load. The Lorentz force now points backwards, so that the fluid has to be forced to flow by an external pressure gradient (like in a turbine).

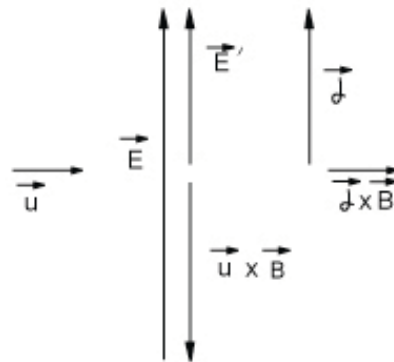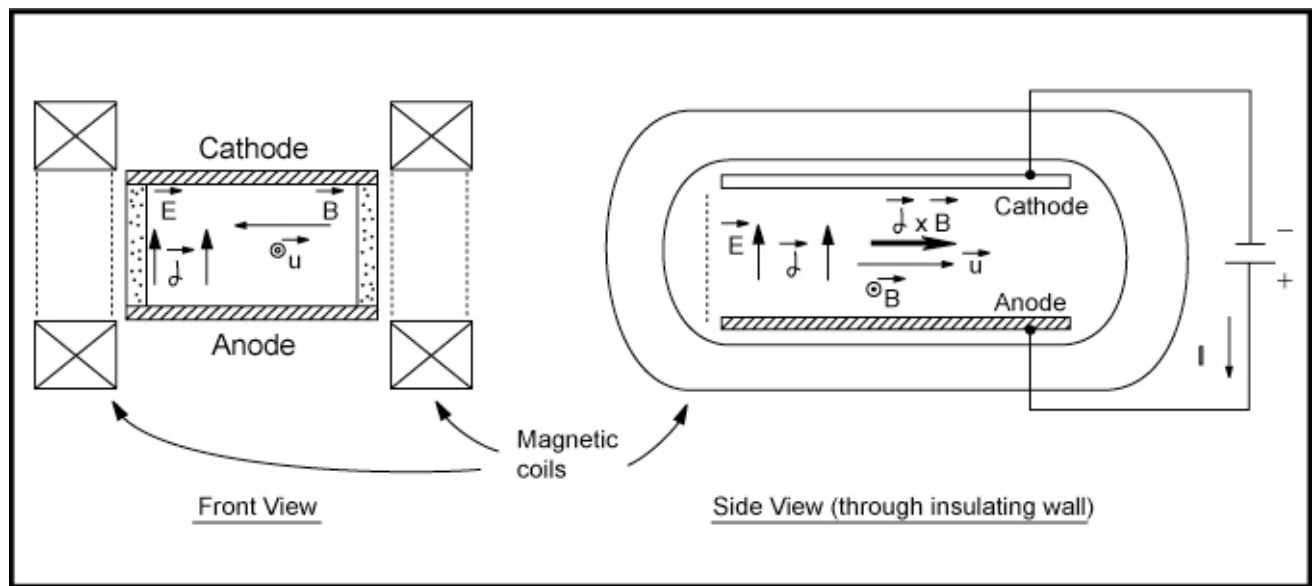


### Effect of the Hall Parameter

In a moderate pressure plasma  $\beta$  can easily exceed unity. If the construction is the same as before, Ohm's law can be represented graphically as shown below.

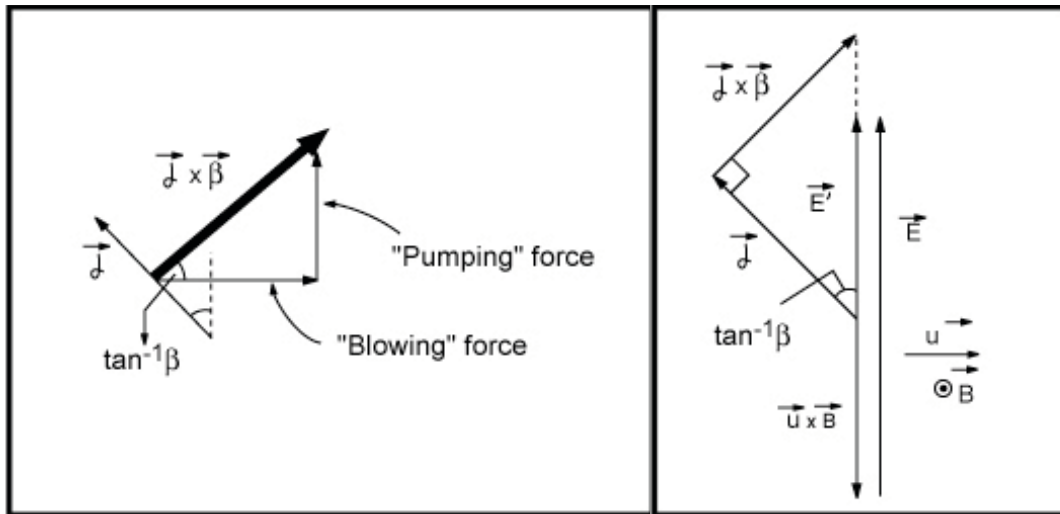

We can see that the effect is to turn the current and the Lorentz force counter clockwise by  $\tan^{-1} \beta$ . There is still a forward force (called the “blowing” force), but also now a transverse force, called the “pumping” force, because its main effect is to pump fluid towards the cathode wall, creating a transverse pressure gradient (low pressure at the anode). Basically, the axial (or Hall) current does no useful work, but it still contributes to the Joule dissipation  $j^2/\sigma$ . Thus, we may want to turn the whole diagram by  $\tan^{-1} \beta$  clockwise and have  $\vec{j}$  flow transversally only and  $\vec{f} = \vec{j} \times \vec{B}$  point axially.


But notice that this implies a forward component of the external field  $\vec{E}$ :

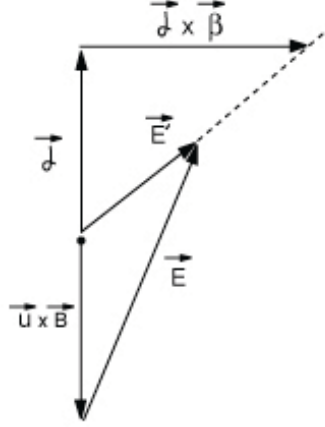

Hence, we have to build the electrode wall in such a way that an axial voltage can be sustained. For example, it can be made of independent metallic segments, connected transversally in pairs, and with insulation between each pair, so that a voltage can also be applied between each segment and its downstream neighbor. Unless a lot of ingenuity is used, this segmented construction complicates the design and connections greatly.

### Self-field coaxial construction

Leaving aside for the moment the question of how to provide the magnetic field, the simple continuous electrode accelerator can be further simplified by “wrapping it around” into an annulus, thereby eliminating the insulating walls:

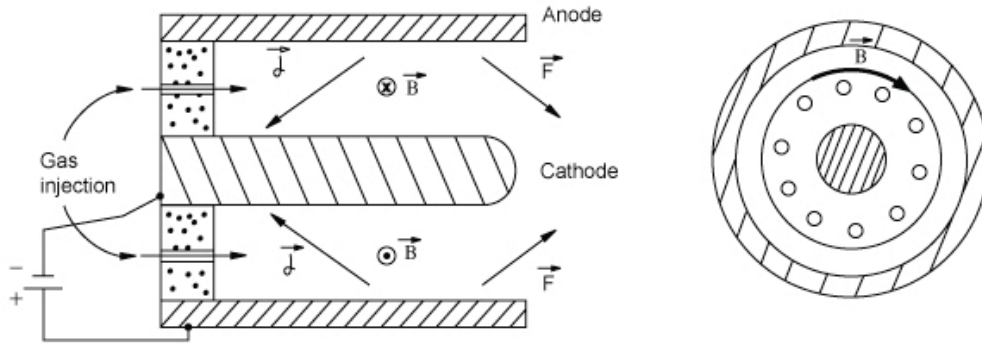

The magnetic field is now azimuthal, with circular lines of force. The lower part of this diagram is seen to be equivalent to that for the simple linear channel (with the Hall effect included). The insulating sidewalls have been replaced by the annular plasma itself. Of course, an insulating back-wall is still required.

It can be seen that the current will (because of the skewness due to the Hall effect) tend to concentrate near the anode downstream edge and near the cathode root. Also, the pumping force will now tend to produce a highly concentrated jet of plasma; in fact, a highly luminous central core is usually observed in MPD plumes, extending from immediately downstream of the cathode for sometimes several cathode lengths.


Turning now to the question of the magnetic field, notice that the azimuthal  $\vec{B}$  can be provided by the plasma current flowing in the meridional plane. This can be seen from Ampere's law, written in cylindrical coordinates:



$$\mu_0 j_r = \frac{1}{r} \frac{\partial B_x}{\partial \theta} - \frac{\partial B_\theta}{\partial x} = -\frac{\partial B_\theta}{\partial x} \quad \text{for } B_x = 0 \quad (19)$$

$$\mu_0 j_x = \frac{1}{r} \frac{\partial(rB_\theta)}{\partial r} - \frac{1}{r} \frac{\partial B_r}{\partial \theta} = \frac{1}{r} \frac{\partial(rB_\theta)}{\partial r} \quad \text{for } B_r = 0 \quad (20)$$

The direction of  $\vec{B}$  is also that required for acceleration. This can be seen either from the equations, or from the right hand rule applied to a number of representative  $\vec{j}$  vectors, or from the known fact that parallel wires carrying current in the same direction attract each other.

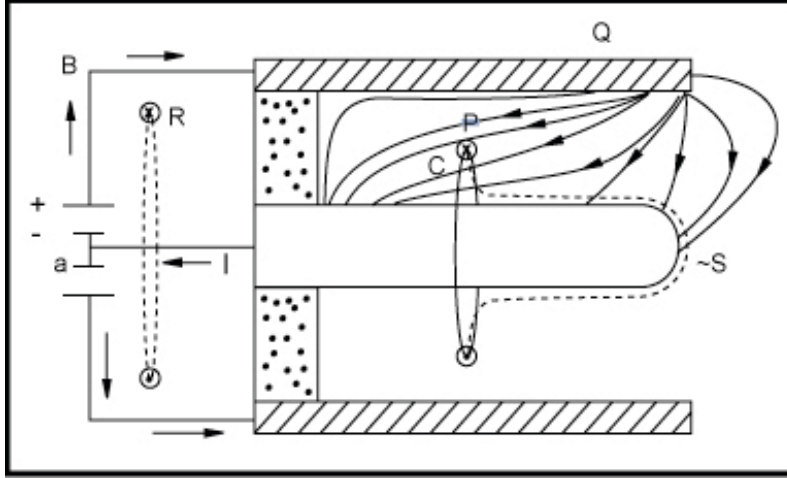

The magnitude of the magnetic field at a point  $P$  can be simply related to the amount of current  $I'$  which crosses the surface  $S$ . This surface leans on the ring that contains  $P$  and extends around the cathode tip as shown.

We have, from the integral form of Ampere's law,

$$B(P) = \mu_0 \frac{I'}{2\pi r} \quad (21)$$

where  $r$  is the radial coordinate of  $P$ . In particular,  $I' = I$ , the total current, for any point on the insulating backplate, and  $I'$  is zero for points like  $Q$ , outside the cylinder.

### Approximate calculation of thrust

There are two major contributions to the thrust of our coaxial accelerator. One of them is the familiar integral of the gas pressure over the back-facing surfaces. This is called the “electrothermal” or “aerodynamic” thrust, and would be the only one acting in a device where  $j^2/\sigma$  dominates over  $(\vec{j} \times \vec{B}) \cdot \vec{u}$  (or, for that matter, in a chemical rocket). The other component is the reaction to the Lorentz forces exerted on the plasma, and is physically applied as a magnetic force on some of the metallic conductors carrying current to the thruster. For example, looking at the figure, and assuming for simplicity that the conductors in the back are arranged symmetrically, we see that at points like  $R$  the enclosed current for the loop shown is the total current  $I$ , and so  $B = \mu_0 I / 2\pi r$ , in the same direction as inside the engine. Across the radial wires,  $B$  goes to zero, but at least a part of each wire is subject

to  $B$ , and since its current is radially outwards, the Lorentz force on it is to the left, i.e., a thrust.

At high efficiencies, the electromagnetic thrust dominates over the electrothermal thrust. We can calculate it relatively easily with a few assumptions. First, we have exactly (by action and reaction),

$$\vec{F}_{\text{EM}} = \int \vec{j} \times \vec{B} dV = \frac{1}{\mu_0} \int (\nabla \times \vec{B}) \times \vec{B} dV \quad (22)$$

In general,

$$(\nabla \times \vec{B}) \times \vec{B} = (\vec{B} \cdot \nabla) \vec{B} - \nabla \left( \frac{B^2}{2} \right) \quad (23)$$

But since  $|\vec{B}|$  does not vary along its own direction in our case,

$$(\vec{B} \cdot \nabla) \vec{B} = -\frac{B^2}{r} \hat{i}_r$$

(no axial component, integrates to zero by symmetry).

$$\vec{F}_{\text{EM}} = -\frac{1}{\mu_0} \int \nabla \left( \frac{B^2}{2} \right) dV \quad (24)$$

and by the vectorial version of Gauss' theorem,

$$\vec{F}_{\text{EM}} = -\frac{1}{\mu_0} \int \frac{B^2}{2} d\vec{A} \quad (25)$$

where the integral extends to the surface surrounding the plasma and  $d\vec{A}$  points outwards from that surface. We are interested only on the axial force, so,

$$F_{\text{EM}} = -\frac{1}{\mu_0} \int \frac{B^2}{2} dA_x \quad (26)$$

where now  $dA_x$  is the projection of each area element normal to the axial direction. In particular, for any cylindrical surface,  $dA_x = 0$ . The only surfaces surrounding the plasma which face backwards (or forward) are the backplate, the cathode tip and the anode rim. For the backplate, using (24) with  $I' = I$ , we calculate the contribution

$$F_{\text{EM}}^{\text{backplate}} = +\frac{1}{\mu_0} \int_{R_c}^{R_a} \frac{1}{2} \left( \frac{\mu_0 I}{2\pi r} \right)^2 2\pi r dr = \frac{\mu_0 I^2}{4\pi} \ln \frac{R_a}{R_c} \quad (27)$$

where  $R_a$  and  $R_c$  are the anode and cathode radii, and the (+) sign is because the normal  $d\vec{A}$  to the surface points backwards (i.e., out of the plasma).


The calculation of the cathode tip and anode rim contributions is much more involved, since we would need to know the distribution of current on these surfaces. However, for conventionally built thrusters, these contributions have been estimated to amount to at

most 10% of the total (most of the current flows from the cylindrical part of the anode to the back of the cathode). Thus, if we also neglect the electrothermal thrust, the device thrust would be a reasonable approximation to Eq. (27),  $F \approx F_{EM}^{\text{backplate}}$ , also known as Maecker's law.

Notice:

- $F$  is independent of size.
- $F$  scales as the square of the total current.

These rules are observed to apply quite well in practice. For example, the enclosed figure, from experiments at Princeton, shows the quadratic dependence very clearly.

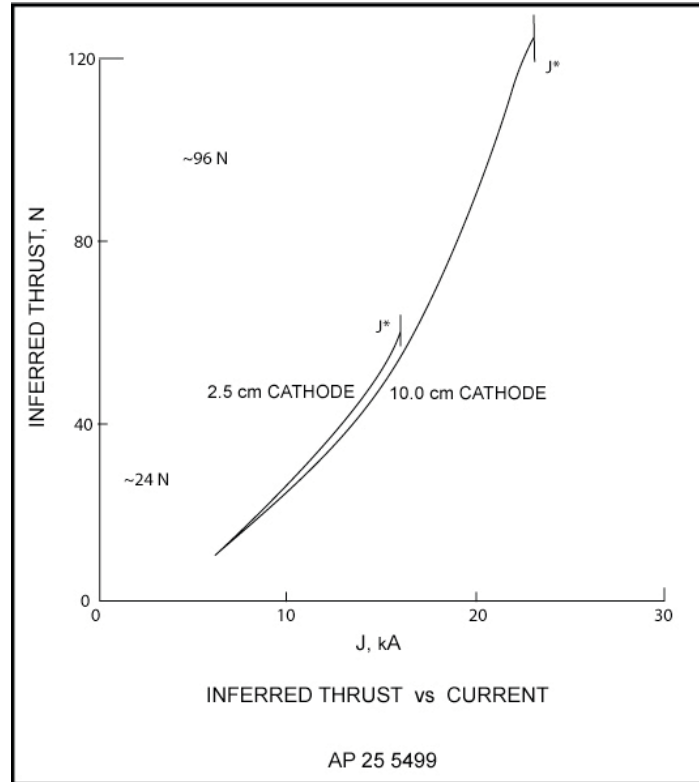

Using Eq. (27), the expression for the exit velocity (and hence the specific impulse) follows easily,

$$u_e = \frac{F}{\dot{m}} \approx \left( \frac{\mu_0}{4\pi} \ln \frac{R_a}{R_c} \right) \frac{I^2}{\dot{m}} \quad (28)$$

The speed of sound at representative points in the flow will scale like  $M^{-1}$  ( $M$  is the molecular mass of the gas), and from Eq. (28) we see that the Mach number (say, at exit) must vary like the quantity,

$$\frac{I^2 \sqrt{M}}{\dot{m}} \quad (29)$$

This parameter has been found indeed to be the most important scaling parameter for MPD thrusters. In particular, it has been found that for each geometrical arrangement, a limiting


value of  $I^2\sqrt{M}/\dot{m}$  exists beyond which the operation becomes highly unsteady and erosion of the electrodes increases by orders of magnitude. The data for many values of  $I$ ,  $\dot{m}$  and even for different propellants show this limit at about the same critical value  $\left(\frac{I^2\sqrt{M}}{\dot{m}}\right)^*$  of the parameter. Representative values for Argon ( $M = 40$  g/mole),

$$I^* = 23,000 \text{ A} \quad \text{and} \quad \dot{m}^* = 6 \text{ g/s}$$

giving,

$$\left(\frac{I^2\sqrt{M}}{\dot{m}}\right)^* = 560 \quad (I \text{ in kA}, M \text{ in g/mol}, \dot{m} \text{ in g/s})$$

However, this limit can be modified by changes in the configuration of the engine, and much research is being done to push it to as high values as possible. The reason is that as this parameter increases, so does the ratio of magnetic pressure  $B^2/2\mu_0 \sim I^2$  to dynamic pressure  $\sim \dot{m}u \sim \dot{m}/\sqrt{M}$ , and hence, the relative importance of electromagnetic effects. Thus, high values of  $I^2\sqrt{M}/\dot{m}$  lead to high thruster efficiency, and (as shown by Eq. (28)) high specific impulse.

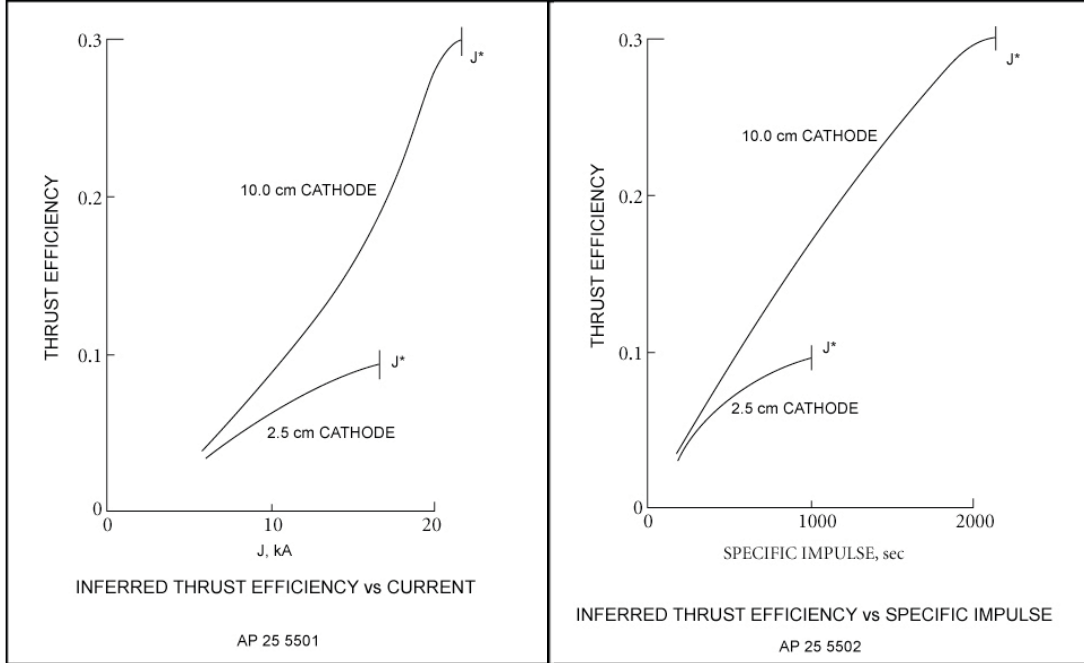


The electrical characteristics of the accelerator can also be estimated. If the thrust efficiency is,

$$\eta = \frac{\dot{m}u_e^2}{2IV} = \frac{F^2}{2\dot{m}IV}$$

then, using Eq. (28) we obtain,

$$V = \frac{1}{2\eta} \left( \frac{\mu_0}{4\pi} \ln \frac{R_a}{R_c} \right)^2 \frac{I^3}{\dot{m}} \quad (30)$$

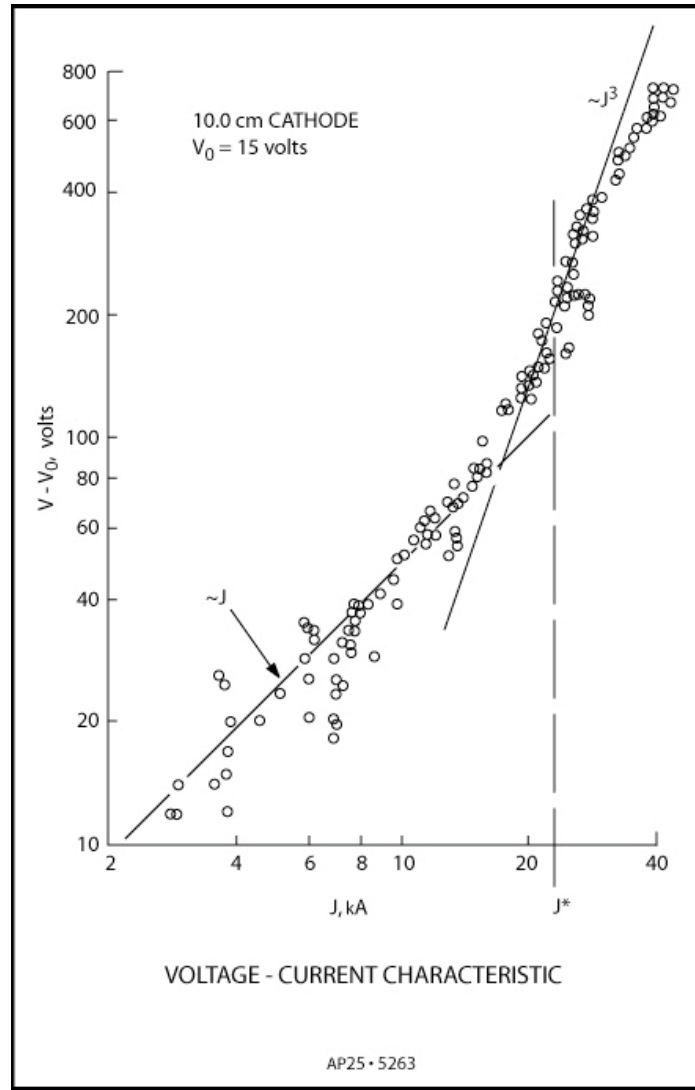

Thus, if  $\eta$  itself varies little with current, the voltage is seen to vary as the cube of the current. This trend is indeed observed at high currents (see graph, from Princeton tests). At lower currents,  $\eta$  does go down, and in addition the electrothermal component of thrust predominates, and the near-electrode voltage drops become comparable to the voltage needed for acceleration. The net result is a departure from the  $V \sim I^3$  line, towards a linear dependence.

### Power Requirements


Consider the 23 kA, 6 g/s example mentioned before, and assume  $R_a = 5$  cm and  $R_c = 1$  cm. The thrust is then,

$$F = \left( 10^{-7} \times \ln \frac{5}{1} \right) (23000)^2 = 85.1 \text{ N}$$

and the jet power is,

$$P_{jet} = \frac{F^2}{2\dot{m}} = \frac{(85.1)^2}{2 \times 0.006} = 6.04 \times 10^5 \text{ W}$$


Considering that the best efficiencies obtained so far are of the order of 50%, the actual power required is seen to be about 1.2 MW. This is a difficult requirement to meet in space, unless relatively large nuclear reactors are used for the power generation. However, one escape clause available is to operate in a pulsed mode, i.e., with short high power pulses supplied by a pulse-forming network which gets “recharged” between pulses by a moderately small power supply. An example of such a pulse and the schematic of the device and its gas and power supplies are shown in the figures. The pulse-forming network is a capacitor-inductor bank as shown:

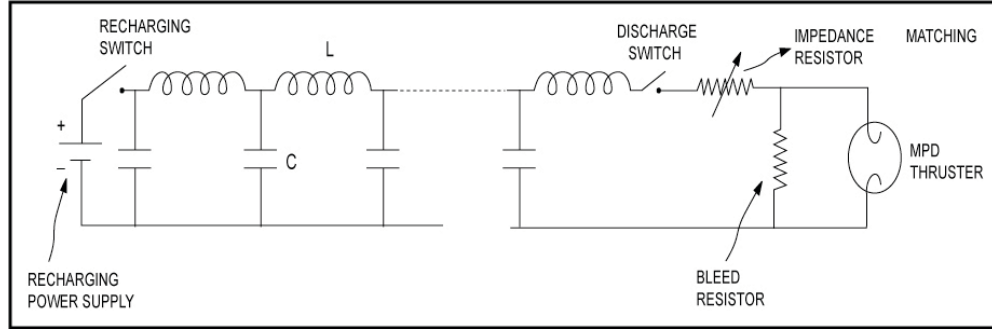

Its discharge time is  $2N\sqrt{LC}$ , where  $N$  is the number of stations in the ladder. Its output impedance is  $\sqrt{L/C}$ , and should ideally be equal or near the input impedance,

$$\frac{V}{I} = \frac{1}{2\eta} \left( \frac{\mu_0}{4\pi} \ln \frac{R_a}{R_c} \right)^2 \frac{I^2}{\dot{m}}$$

of the thruster to prevent oscillations (ringing). The mismatch is compensated for by inserting a matching resistor. These pulse-forming networks work well, but tend to be bulky and heavy.

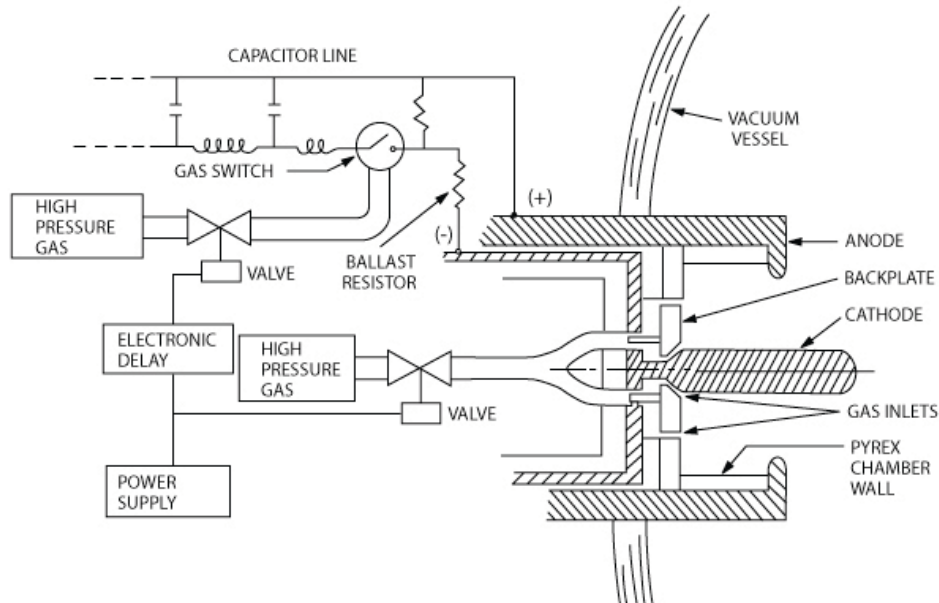

MPD APPARATUS

MIT OpenCourseWare  
<http://ocw.mit.edu>

16.522 Space Propulsion  
Spring 2015

For information about citing these materials or our Terms of Use, visit: <http://ocw.mit.edu/terms>.